

TECHNICAL INFORMATION 1408

Dynasylan[®] Primers

Examples for the formulation of
silane primers for paints and coatings




Dynasylan[®]

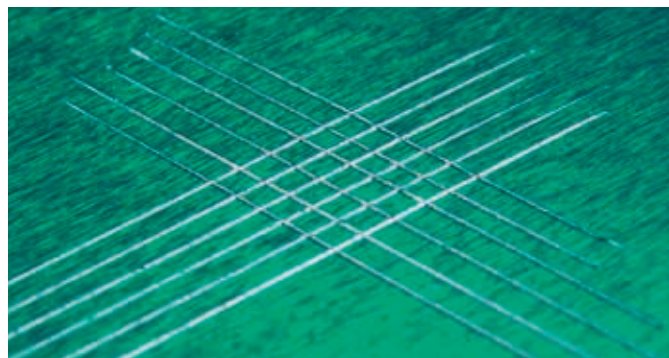

EVONIK
Leading Beyond Chemistry

Dynasylan® Primers

Examples for the formulation of silane primers for paints and coatings

Dynasylan® organofunctional silanes have successfully been used for years as adhesion promoters for coatings on a wide range of substrates.

The use of silanes is usually done in one of two ways. Firstly, as a paint additive and secondly, using a silane primer for substrate pre-treatment. As paints usually are multi component systems, the additive method often fails due to side reactions with the paint components. In these cases, pre-treatment with a silane primer is advised.



Aluminum substrate pretreated with Dynasylan® HYDROSIL 2909 – Primer



Coated without silane pre-treatment

New investigations, summarized in the table below, show that the amounts and identity of the components are of utmost importance to achieve good surface wetting properties. The wetting is also influenced by the surface properties of the substrate. The surface must be clean, free of crease and dust.

In some cases an alkaline cleaning can also activate the surface and the activation can improve the performance, e.g. on metal substrates.

For some substrates a cleaning procedure with organic solvents could be sufficient, for other substrates a cleaning with alkaline or acidic cleaners at elevated temperatures could be necessary.

It is very important that the primer solution is wetting the substrate surface. If small droplets are formed on the surface the cleaning procedure has to be modified or a wetting agent has to be used. The amounts given in the table are intended as an aid for the formulation of silane primers.

Dynasylan®		Functional Group	Solvent		Water	Acetic Acid
GLYMO	1%	(Epoxy-)	Methoxypropanol	88.8%	10.0%	0.2%
VTMO	1%	(Vinyl-)	Methoxypropanol	94.0%	5.0%	-
VTEO	1%	(Vinyl-)	Methoxypropanol	93.8%	5.0%	0.2%
MEMO	1%	(Methacryl-)	Methoxypropanol	93.8%	5.0%	0.2%
AMEO	1%	(Amino-)	Isopropanol	98.5%	0.5%	-
HYDROSIL 2909	0.6%	(Amino/Alkyl)	Methoxypropanol	99.4%	-	-
DAMO	2%	(Amino-)	Methoxypropanol	96.5%	1.5%	-
1122	2%	(Amino-)	Isopropanol	96.5%	-	1.5%
SIVO 210	2%	(Amino-)	Methoxypropanol	96.7%	-	1.3%
1189	2%	(Amino-)	Methoxypropanol	96.6%	-	1.4%
SIVO 214	2%	(Amino-)	Methoxypropanol	96.8%	-	1.2%
SIVO 160	10%	(Amino-)	H ₂ O	90.0%	-	-
HYDROSIL 2776	4.0%	(Amino-)	H ₂ O	96.0%	-	-
HYDROSIL 2627	4.0%	(Amino-)	H ₂ O	96.0%	-	-

The proposed formulation examples are summarized in the table. They contain on the order of 1-2% (w/w) silane. The required silane concentration depends very much on the surface roughness. For a good performance smooth surfaces need a lower silane and a rough surface usually needs a higher silane concentration.

The best silane concentration should be evaluated in a screening test with different silane concentrations. E.g. SIVO 160 can be used in a concentration range of 4.0 to 14.0% depending on the application and surface roughness.

The amounts of solvent and water have been chosen in order to obtain transparent films that are not visible. If the wetting of the surface is not sufficient the cleaning of the surface has to be modified or the solvent has to be changed. An application of the primer can be done using usual methods (spraying, dipping, roll coating). Screening tests are useful to find the best curing temperature for the application and performance.

Application of the paint should only occur when the primer has been dried onto the substrates.

Formulation of a silane primer solution:

- Add the solvent.
- If needed, water and hydrolysis catalyst (acetic acid) is added.
- The silane is added slowly under stirring.
- The solution is stirred for one hour.
- The final primer solution should be clear and could be slightly yellow.
- The primer solutions with the ethoxy silanes should be stirred for more than 2 hours.
- **Caution:** The addition of aminosilanes to the liquid can result in a final temperature of up to 50 °C.
- The useful life of the primer solution can vary between one week to one year depending on the application and silane. The exact stability needs to be tested.

Substrate recommendations

Dynasylan®	Aluminum ¹	Steel ¹	Copper	Glass
GLYMO	•	•	•	•
VTMO	•	•	•	
VTEO	•	•	•	
MEMO	•	•	•	
HYDROSIL 2909	•	•	•	•
AMEO	•*	•*	•	•
DAMO	•	•	•	•
1122	•	•	•	
SIVO 210	•	•	•	•
1189	•	•	•	•
SIVO 214	•	•	•	•
SIVO 160	•	•	•	•
HYDROSIL 2627	•	•	•	•

• recommended •* not recommended for dip coating

¹ Indication to the tested substrates: **Steel:** cold rolled steel (CRS). abraded surface 0.3–0.6% Mn / 0.08 – 0.13% C / 0.05% S / 0.04% P
Aluminum: alloy (3105 H 24) 96.8–97.4% Al / 1.0–1.5% Mn / 0.6% Si / 0.05–0.2% Cu

Dynasylan® organofunctional silanes act as a bridge between the organic coating and the inorganic substrate and thus are excellent adhesion promoters. Formation of silanol groups results from the hydrolysis of the silane's alkoxy groups.

These react with the OH-groups of the inorganic or metallic substrate to form a chemical bond. The organofunctional group of the silane then reacts with the organofunctional groups of the binder, resulting in a stable adhesion bridge.

This information and any recommendations, technical or otherwise, are presented in good faith and believed to be correct as of the date prepared. Recipients of this information and recommendations must make their own determination as to its suitability for their purposes. In no event shall Evonik assume liability for damages or losses of any kind or nature that result from the use of or reliance upon this information and recommendations. EVONIK EXPRESSLY DISCLAIMS ANY REPRESENTATIONS AND WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, AS TO THE ACCURACY, COMPLETENESS, NON-INFRINGEMENT, MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE (EVEN IF EVONIK IS AWARE OF SUCH PURPOSE) WITH RESPECT TO ANY INFORMATION AND RECOMMENDATIONS PROVIDED.

Reference to any trade names used by other companies is neither a recommendation nor an endorsement of the corresponding product, and does not imply that similar products could not be used. Evonik reserves the right to make any changes to the information and/or recommendations at any time, without prior or subsequent notice.

Dynasytan® and SIVO® are registered trademarks of Evonik Industries or one of its subsidiaries.

EUROPE / MIDDLE-EAST / AFRICA

Germany

Evonik Operations GmbH
Business Line Silanes
Rodenbacher Chaussee 4
63457 Hanau
Phone +49 6181 59-13636
dynasytan@evonik.com

NORTH AMERICA

United States

Phone +1 800 237-6745 (toll free)
Phone +1 973 929-8513
dynasytan@evonik.com

LATIN AMERICA

Brazil

Phone +55 11 3146-9811
Mobile +55 11 98700 0519
dynasytan@evonik.com

ASIA PACIFIC

China (RPC)

Phone +86 21 6119-1399
Mobile +86 158 2111 9680
dynasytan@evonik.com

India

Phone +91 226 723-8809
Mobile +91 9820 159532
dynasytan@evonik.com

Japan

Phone +81 3 5323-7446
Mobile +81 80 4091 9142
dynasytan@evonik.com

Korea

Phone +82 2 320-4773
Mobile +10 5418 8239
dynasytan@evonik.com

Singapore

Phone +65 6 809-6576
Mobile +65 8363 4735
dynasytan@evonik.com

Taiwan (ROC)

Phone +886 2 2717-1242
Mobile +886 939 712 452
dynasytan@evonik.com

RE-179-MAR18TMC